


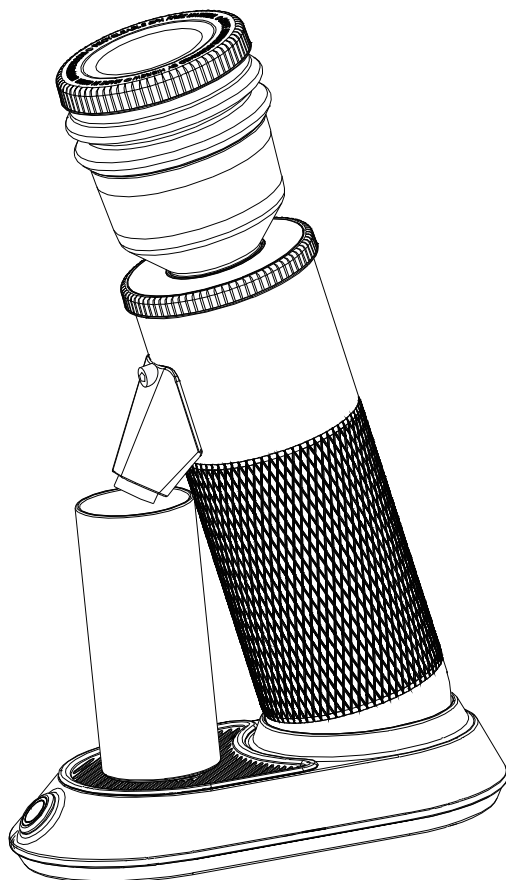

USER MANUAL



EN

DE

ES

FR

KR

RU

AE

CN

JP

IT

PT

COFFEE GRINDER

SKU G5

Please read this owner manual carefully before using the coffee bean grinder to avoid personal injury, damage or misuse of the product.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed.

1. Read all the instructions.
2. To protect against fire, electric shock and injury to persons, do not immerse cords, plugs or the machine in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To unplug, grasp plug and pull from electrical outlet. Never pull cord.
5. Avoid contact with moving parts.
6. To reduce the risk of severe injury to persons or damage to the appliance, keep hands and utensils out of the coffee bean box while grinding, and when the appliance is plugged in.
7. Do not operate the grinder with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. In this case, return the appliance to the approved Service Center for examination, repair, or electrical or mechanical adjustment.
8. The use of attachments not recommended or sold by may cause fire, electric shock or injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
11. Check the coffee bean box for the presence of foreign objects before using.
12. Always operate the burr grinder with the lid securely in place.
13. Do not place on or near a hot gas or electric burner or in a heated oven.
14. This product has been designed for household use only. Any commercial use, inappropriate use or failure to comply with the instructions will void the manufacturer's Warranty.
15. This appliance is only used for roasted coffee beans grinding. Do not use the appliance for other intended use (such as hard seeds, spice, nuts, etc..)
16. Every appliance is inspected strictly during mass production, and is tested with coffee beans for grinding, which may cause slight traces of use or residual coffee powder.
17. All machines are subject to stringent quality control. Practical tests using machines taken at random are conducted and this may explain any slight marks or coffee residue showing prior to use.
18. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved.
19. This unit is equipped with a grounding plug, please make sure that the wall outlet in your home is well grounded.

EN

SAVE THESE INSTRUCTIONS

CAUTION

This appliance is for household use only. Any servicing other than cleaning and user maintenance should be performed by the nearest authorized Service Center.

- Do not immerse the appliance into water.
- To reduce the risk of fire or electric shock, do not dismantle the appliance. Repair should be done by an authorized Service Center only.

SHORT CORD INSTRUCTIONS


- Regarding your Cord Set:
- A. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
 - B. Extension cords should be used with caution.
 - C. If an extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, (2) if the appliance is of the grounded type, the extension cord should be of a grounded type and (3) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other), to reduce the risk of electrical shock. This plug will fit into a polarized outlet only one way.

If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.




COMPONENT DESCRIPTION

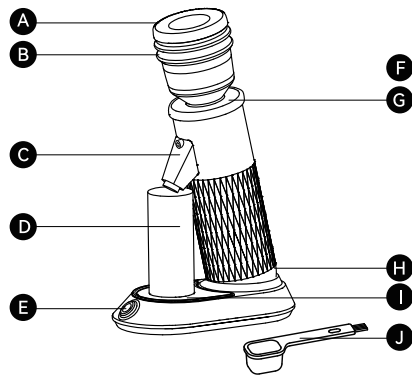

A	Top cover	B	Air Blower
C	Powder Outlet	D	Powder Container
E	On/Off	F	Coffee Bean Container
G	Grinding levels	H	Angle Adjustment
I	Silicone Pad	J	Spoon and Brush

SET THE COFFEE BEAN BOX

1. Ensure that there is no coffee grinding residue at the top of the lower grinding disc. If there is residue, you can clean it with the brush provided.
2. Align the clamping position of the upper grinding disc with that of the lower grinding disc, and then turn it clockwise and tighten it.
3. Screw the upper grinding disc assembly clockwise to the end, and then back counterclockwise to select the required gear.

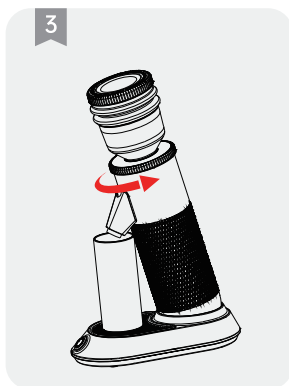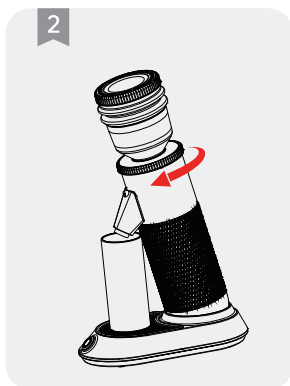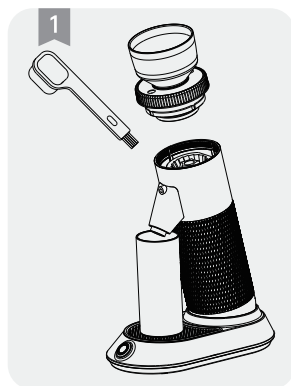


Note:

If the upper grinding disc is not tightened and locked in place, the machine indicator lights up and the blue light/red light flashes alternately, and the machine cannot work at this time. Tighten the upper grinding disc clockwise, lock it, and the machine indicator light goes out, then the machine can be operated.


EN

OVERVIEW OF GRINDING METHODS

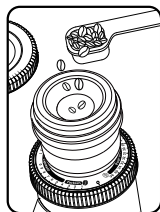


Weighing coffee beans

Use a matching spoon to hold 2 spoons of coffee beans (if there is no spoon, you can also weigh 18g coffee beans with an electronic scale) and pour them into the bean box.

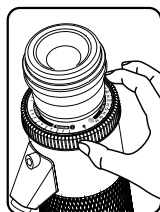

Adjust the scale

first screw the upper grinding disc assembly clockwise to the end, and then back counterclockwise to select the required gear. Rotate the upper grinding disc assembly and select the required scale according to the type of coffee to be made.

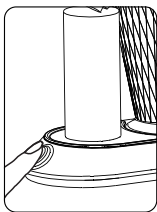


Choose fast grinding or slow grinding as needed

Rapid grinding: press the switch to start rapid grinding, and then press the switch briefly to stop; Stop automatically after no operation for 26 seconds during grinding.

Slow grinding: press and hold the switch to start slow grinding, press the switch briefly to stop; No operation for 36 seconds during grinding, and it will stop automatically.

Remarks: The function of slow grinding is to reduce the heat generated per unit time in the process of grinding beans, which is beneficial to keep more coffee mellow and improve the brewing taste.

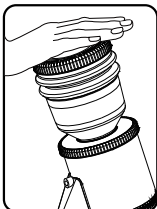

Clean up the residual powder


press the Air blower to clean up the residual coffee powder in the bean grinder.

Remarks: Please pay attention to clean up the residual powder after each use to prevent the powder from blocking the machine.

MACHINE ANGLE ADJUSTMENT


This product can be tilted and adjusted as required.

EN

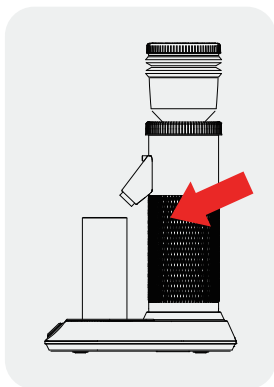

Vertical State


In vertical state, it is more convenient to press the Air blower. Gently push the machine in the direction of the arrow to tilt the machine.

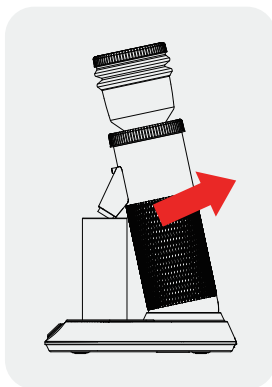


Inclined State

Inclined state can reduce flying powder. Gently push the machine in the direction of the arrow to return the machine to the vertical position.


USE OF THE AIR BLOWER

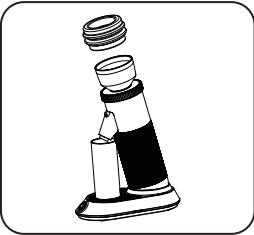

Step 1
Place the air blower.

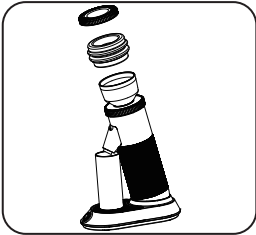


Step 2
Put the lid on.

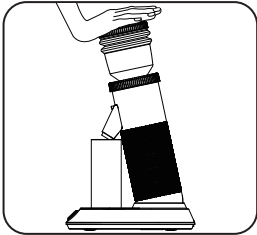

Step 3
Place your hand above the bean cup cover, gently press the bean cup cover, and blow the residual coffee powder out of the machine.

ADJUSTMENT OF COFFEE POWDER THICKNESS

- 1. Lock the upper grinding disc.
- 2. Open the lid of the coffee cup and put coffee beans in the coffee cup. With the lid on, you can now adjust the thickness of coffee powder.
- 3. The coffee grinder has 36 gears for adjusting the thickness. If you want to adjust the grinding thickness, please rotate the upper grinding disc assembly to adjust the coffee powder thickness according to the type of coffee you are brewing.

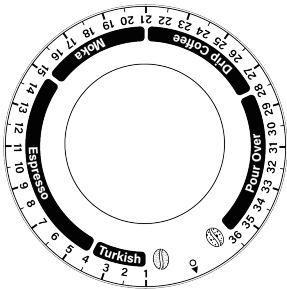

See chart below: GRIND SIZE SETTING RECOMMENDATIONS

	Turkish	Espresso	Mocca	Drip Coffee	Pour Over
Coffee Type					
Grind Setting	1-4	4-15	15-21	21-28	28-36

CLEANING AND MAINTENANCE

CLEANING AFTER EACH USE


Regular cleaning helps the burr achieve consistent grinding results, always recommend to clean with the air blower to remove residual powder.

To keep all your coffee's aroma and to avoid degradation of the ground coffee, empty the ground coffee container after each use.

- Always unplug from the power outlet before cleaning.
- Never place the grinder, power supply cord or plug in water or under running water.
- Do not use strong detergents or abrasive pads to clean the appliance.
- Clean the lids and the ground coffee holder in warm, soapy water.
- Please follow the steps to cleaning conical burr as below.




1. Grind the remaining coffee beans from the bean grinder.

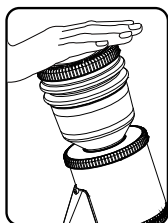


2. Press the air blower to blow out the residual coffee powder in the machine.




3. After taking the upper cover and the air blower away. Turn the upper grinding disc counterclockwise and take it away.

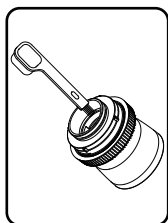

4. Clean the upper grinding disc with a brush.

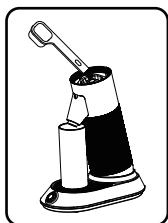

5. Clean the lower grinding disc assembly with a brush.

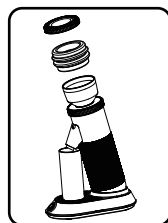

6. Restore the machine, first install the grinding disc assembly and tighten it clockwise, then install the air blower and the bean box cover.

Note: In order to install the upper grinding wheel in place, the residual coffee powder and coffee bean dregs in the lower grinding wheel must be removed before installation.

KINDLY REMINDER

Please follow the following rules in order to make your equipment run normally.

1. The bean box cover can be used only after it is closed.
2. The bean box and the bean box cover are correctly installed on the equipment.
3. Please rotate the upper grinding disc assembly clockwise to lock the machine, and then adjust it counterclockwise to the required scale to start grinding normally.
4. Fresh coffee powder is the key factor to make delicious coffee.
5. The flavor and concentration of coffee can be adjusted according to personal preference, and the variety of coffee beans, coffee quantity and grinding thickness can be changed to achieve the ideal taste.
6. It is best to use fresh coffee beans marked with baking date.
7. Please store coffee beans in a dark, low-temperature and dry environment.
8. If possible, try to use vacuum packaging.
9. Buy coffee beans in small batches to reduce the storage time, and it is best to store them for no more than one week at a time.
10. Once ground into coffee powder, coffee beans will soon lose their aromatic flavor. In order to achieve the best brewing effect, coffee should be made immediately after grinding coffee powder.
11. Don't store coffee beans in a coffee box for a long time.
12. When using the storage machine, please operate it to grind the remaining coffee beans in the machine and clean them.
13. Clean coffee bean boxes and powder containers regularly.

TECHNICAL PARAMETER

SKU	G5	
Parameters	AC220V-240V, 50/60Hz, 200W	AC120V, 60Hz, 180W
Size	103*187*310mm	
Weight	2100g	
Motor Speed	400~430r/min	

TROUBLESHOOTING GUIDE

Problems	Solutions
The bean box cannot be installed on the machine.	The upper grinding disc and the lower grinding disc have clamping positions, and the convex marks can be aligned with the grooves before they can be installed correctly.
After alignment, the bean box still cannot be installed on the machine.	Clean up the residual coffee beans and powder from the lower grinding disc.
The bean box and upper grinding disc have been installed, but it is impossible to grind beans after starting the machine. The machine indicator lights up and the blue light/red light flashes alternately.	This machine has safety settings, so it needs to lock the upper grinding disc before starting. Please rotate the upper grinding disc clockwise. After locking the machine, the light of the start button will go out. After starting the machine again, the machine can grind beans normally.

WARRANTY

WARRANTY INFORMATION ONE YEAR LIMITED WARRANTY

MANUFACTURER warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. MANUFACTURER , at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or repaired product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will invalidate this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. MANUFACTURER'S dealers, service centers, or retail stores selling MANUFACTURER products do not have the right to alter, modify or any way change the terms and conditions of this warranty. This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, dis-assembly, repair or alteration by anyone other than MANUFACTURER or an authorized MANUFACTURER service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.


What are the limits on MANUFACTURER'S Liability?

MANUFACTURER shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. MANUFACTURER disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

MANUFACTURER shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or Loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above Limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

Children shall not play with the appliance.

Correct Disposal of this product	
 	This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.