 




# Instruction Booklet

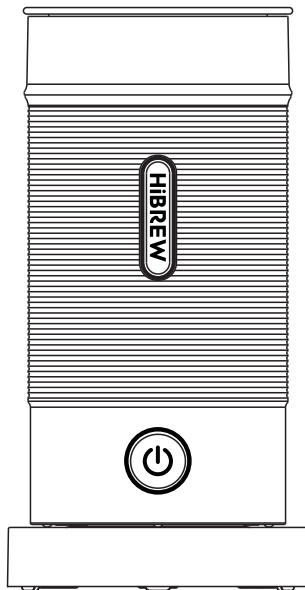

**SKU / M1A**

EN

AE

CN

ES

DE

FR

IT

**READ THIS BOOKLET THOROUGHLY BEFORE USING AND SAVE IT FOR FUTURE REFERENCE**

 
## IMPORTANT INSTRUCTIONS

When using electric al appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following :

1. Read all instructions before using.
2. In case of emergency, immediately unplug the machine from the power outlet.
3. Check that the voltage indicated on the rating label of the appliance does in fact match that of your electrical system.
4. This appliance is not intended to for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience, and knowledge, unless they are supervised or instructed concerning the use of the appliance by a person responsible for their safety. Never leave the appliance unattended during operation. Keep it out of the reach of children.
5. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, has been dropped or damaged in any manner, Return the appliance to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Always unplug the appliance when not in use or before cleaning. Allow it to cool before adding or removing parts and before cleaning the appliance.
7. To protect against fire, electric shock and personal injury, do not immerse cord, plug or appliance in water or other liquid. Never clean the appliance or the power cord if they are humid. Avoid touching the appliance with wet hands.
8. Do not run the cord under carpeting. Do not cover the power cord with throw rugs, runners or similar floor coverings. Arrange the cord away from high traffic areas to a place where it will not be tripped over.
9. Avoid the use of an extension cord as it may overheat and become a fire hazard, If you must use an extension cord, it should be rated no less than 1,000 watts. Only use a grounded socket to connect the appliance.

10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet receptacle and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn outlets.
12. Use the appliance only as the described in this manual. Any other use or accessory attachments not recommend by the manufacture may cause fire, electric shock, or injury.
13. Never wash in the dishwasher or immerse the machine into water.
14. Only use the milk frother with the power base provided. Do not use the power base with anything else.
15. Do not operate without milk in the jug. Do not insert any object or fingers into the jug when operating. Do not overfill the jug. Filling past the maximum levels indicated inside the jug can cause overflowing during operation. Never touch rotating parts. Risk of injury!
16. This appliance is intended to be used in household(in door) and similar applications such as: staff kitchen areas in shops, offices and other working environments like farm houses; by clients in hotels, motels. No liability is accepted for any damage resulting from use for other purposes, faulty operation or amateur repairs.

## QUICK START GUIDE

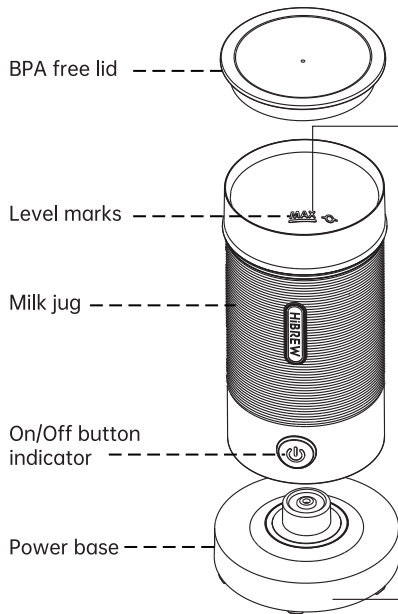

### Level Marks

**MAX**  : Milk heating Max. Level (200ml)

**MAX**  : Milk frothing Max. Level (100ml)

 


Please do not exceed to avoid overflow


**MIN** : Milk frothing or heating Min. Level

### Rotating base for power cord storage

Before storage:

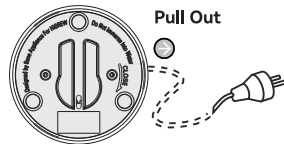

After storage:


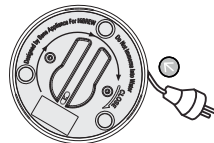 


# OPERATING INSTRUCTION


## 1. Before The First Use

- Unpack the box with care, remove all the packing material away from the appliance and keep it for later use.
- Keep the packing material(bag and etc.) away from children for safety.
- Before using the appliance for the first time, please clean the jug and the accessories as described under the chapter "Cleaning and maintenance" to remove the dust or production residues.
   
## 2. Quick Steps

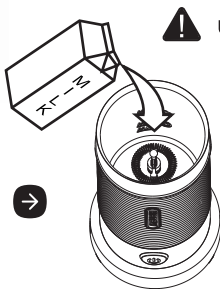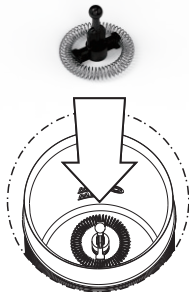


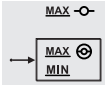
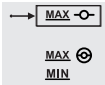
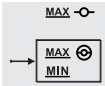


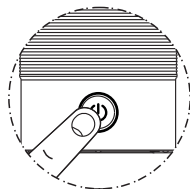UHT whole milk is the best choice!



EN

### 3. Function Definition

Function	Operation 	Indication 	Whisk	Milk Level
Hot & Thick Foam	One Quick Click it	Steady Red	 Whisk with Spring	
Hot & Think Foam	Double Quick Click it	Flashing Red		
Cold & Thick Foam	Press it for 3 seconds	Steady Blue		

Note: The data in this table were provided by HiBREW Lab in accordance to certain brand milk/chocolate, your local milk/chocolate from different countries may be various and get different temperature as well as volume, you should take these data for reference only, not criteria.

### 4. Operating Steps

- Insert whisk firmly inside the jug;
- Pour desired milk into the jug but not more than the maximum to avoid overflow;










- When the product is connected to power, the On/Off indicator will flash 2 times red and 2 times blue lights.
- When press the button with One Quick Click, the frother is set to make hot cappuccino with thick foam, the indicator will be lit in steady Red.
- When press the button with Two Quick Click ( twice click with 2 seconds), the frother is set to make hot cappuccino with thin foam, the indicator will be lit in flashing Red.
- When press the button for 3 seconds, the frother is set to make cold cappuccino with thick foam, the indicator will be lit in steady Blue.
- The milk frother will switch off automatically.
- The operating can be cancelled by pressing the On/Off button during working.

## 5. Hits and tips:

Here are some tips to help you understand better of this device:

- Keep the milk in refrigerator at 4~8°C degree.
- Use whole milk (fat content >3.0%) for best result.
- Keep your whisks in a safe place to prevent from missing.
- Heated milk with thick foam is good for Espresso or Chocolate.
- Heated milk with thin foam is good for art Cappuccino.
- Cold milk with thick foam is good for cold beverage, such as Protein.
- Always wash the jug after use.
- Do not operate it without milk or water inside to avoid scald.
- The device may not start when the milk jug is hot, this is for protection, not malfunction, the device will work normally when it is cold down.
- Suggest to let it have break for 10 minutes between each operation.

## TIPS FOR HOT DRINKS

<div>Whisk</div> 	 One Quick Click it	 Double Quick Click it
	 <p>Cappuccino</p> <p>1/3 Espresso 2/3 frothed milk Some coco powder</p>	 <p>Caffe Latte</p> <p>1/3 Espresso shot 2/3 heated milk and thin foam</p>
	 <p>Latte Macchiato</p> <p>Pour desired frothed milk into a tall glass Add espresso carefully along the rim of the</p>	 <p>Protein powder</p> <p>add water first then add protein powder</p>
	 <p>Hot Chocolate</p> <p>add milk first then add chocolate powder</p>	 <p>Instant coffee drinks</p> <p>Make instant coffee Add frothed milk inside</p>

\* For reference purposes, tested based on HiBREW Lab.



## CLEANING AND MAINTENANCE

Unplug from the power before cleaning, remove the lid from the jug.

***Never immerse the jug or base into water.  
This device is NOT designed for dish-washer.***



1.The jug & base: Clean the jug immediately after each use, clean the wall and bottom with warm soapy water and use the brush to clean the residue if there is, Never use sharp object such as metal brush and never use abrasives cleaning agent to clean the surface to avoid scratches. Then dry with a soft cloth.

2.The lid: Rinse under water directly.

3.The whisks: Fill in tap water to middle Max level, run the cold frothing to clean the whisk itself without removal.

EN

## SPECIFICATION

Rated Voltage: <input type="checkbox"/> AC220V~240V <input type="checkbox"/> AC110V~120V	N.W./G.W.: 0.75kg/0.9kg
Rated Frequency: 50/60Hz	Protection Class: I
Rated Power: 450W	Product Size: 10cm*10cm*20cm

Frothing Capacity: Max.100ml for thick foam / Max. 200ml for thin foam

## TROUBLESHOOTING

Problems	Causes	Solutions
No indicating light when connected to power socket	Plug is not inserted properly	Re-insert into the power
	Jug and power base not connected properly	Remove the jug and place again on the base
	No power in the socket	Check the electric circuit
	Problems with electric elements	Repair
Stopped to work	Jug temperature is too high	Rinse cold water inside the jug to cool down to room temperature
	Jug damaged with immersion in water during wash	Repair
Motor doesn't work	Jug is not cleaned in time after use, dried milk can stall the motor	Clean and move the shaft sleeve of motor by hand to loosen it
	Motor damage	Repair
No heating	Machine damage	Repair
Overflow	Dosage of milk added too much	Fill milk according to the level mark
	Jug reused without cleaning	Cleaning in time after use
	Fat percentage is too high	1. Fat in Milk composition 3%~5% is preferred. 2. Add a little drinking water to dilute

Not enough foam	Inappropriate milk	Make sure to use whole or semi-skimmed milk at refrigerator temperature (about 4-8 °C)
	Wrong mode	Use dense Cappuccino mode by one quick click
	Pasteurized milk can not produce rich foam	Do not use Pasteurized milk
	Jug inner body has been hot	Make sure the inner jug is cleaned and cold down prior to start

## WARRANTY

### LIMITED WARRANTY FOR MANUFACTURER

This product will be free from defects in material and workmanship. MANUFACTURER, at its option will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or replacement product or component. If the product is no longer available replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. MANUFACTURER/dealers, service centers, or retail stores selling MANUFACTURER products do not have the right to alter, modify or any way change the terms and conditions of this warranty. This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than MANUFACTURER or an authorized MANUFACTURER service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes. What are the limits on MANUFACTURER's Liability? MANUFACTURER shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition. Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. MANUFACTURER disclaims all other warranties, conditions or representations, express implied, statutory or otherwise. MANUFACTURER shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.